

PLUM
splitboard

EVA BASEPLATE


Mode d'emploi
Instructions for use

MONTAGE

1. Retirer les vis M5/14 TF des plots supports
2. Présenter l'EVA BASEPLATE
3. Mettre les vis M5/16 TB fournis avec vos EVA BASEPLATE

1. Remove the M5/14 TF screws from the support studs
2. Present the EVA BASEPLATE
3. Insert the M5/16 TB screws supplied with your EVA BASEPLATE

M5/16 TB

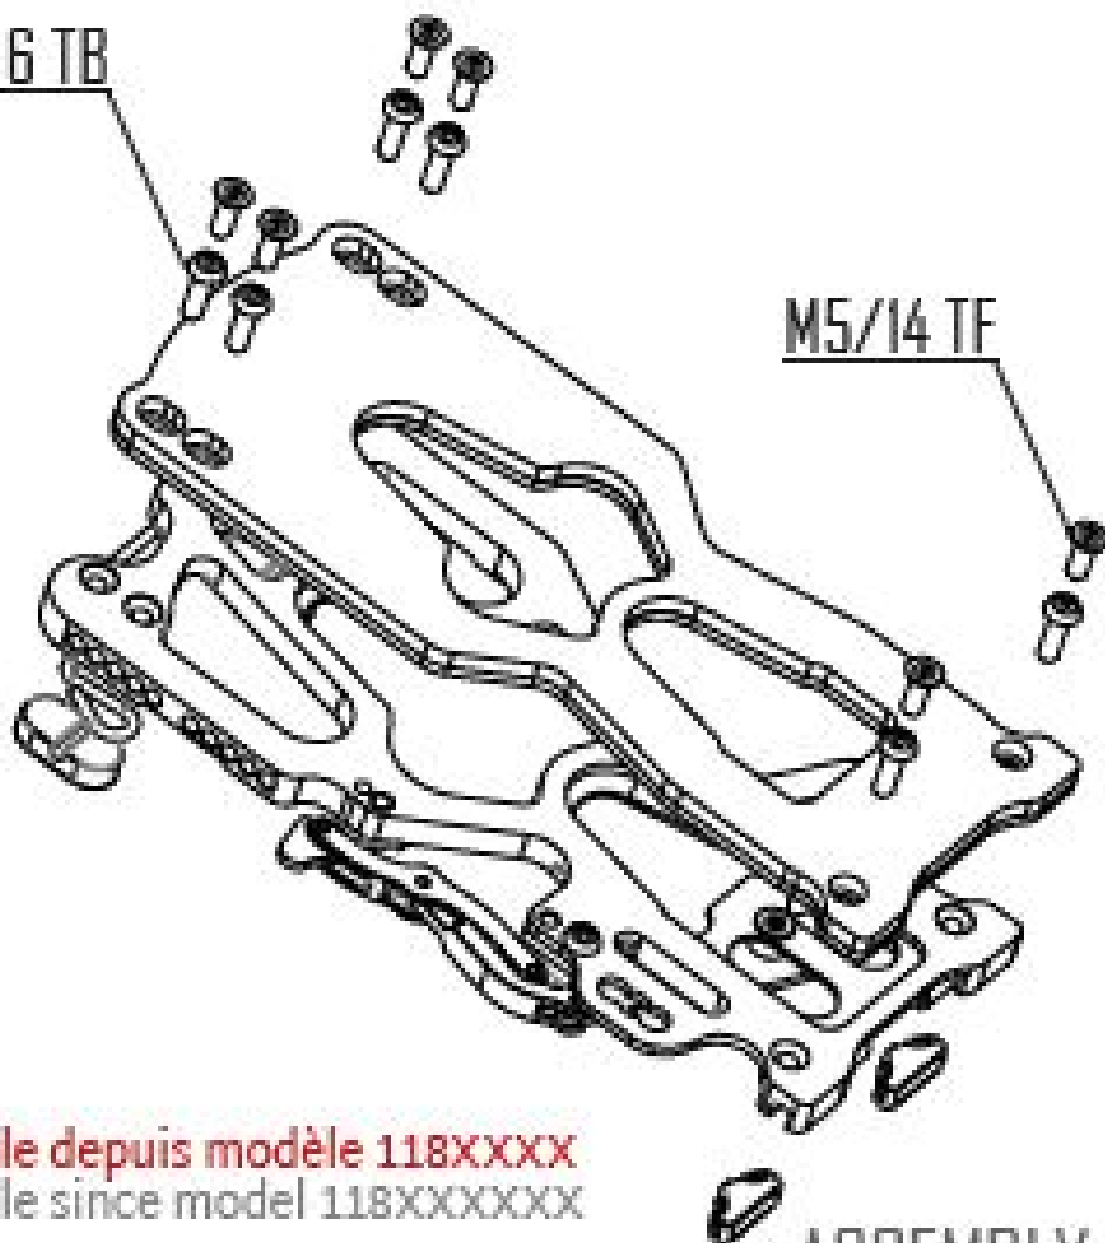

M5/14 TF

Compatible depuis modèle 118XXXXX
Compatible since model 118XXXXXXX

ASSEMBLY